ANALYTICAL REPORT

Eurofins Eaton Monrovia 750 Royal Oaks Drive Suite 100 Monrovia, CA 91016

Tel: (626)386-1100

Laboratory Job ID: 380-12276-1

Client Project/Site: INTERA - Red-Hill-Incident

For:

City & County of Honolulu 630 South Beretania Street Public Service Bldg. Room 308 Honolulu, Hawaii 96843

Attn: Mr. Erwin Kawata

Sebly Fork

Authorized for release by: 10/19/2022 7:09:59 PM Debbie Frank, Project Manager Debbie.Frank@et.eurofinsus.com

Designee for

Rachelle Arada, Manager of Project Management (626)386-1106

Rachelle.Arada@et.eurofinsus.com

Review your project results through EOL.

Have a Question?

Ask
The Expert

www.eurofinsus.com/Env

This report has been electronically signed and authorized by the signatory. Electronic signature is intended to be the legally binding equivalent of a traditionally handwritten signature.

Results relate only to the items tested and the sample(s) as received by the laboratory.

- 1. Laboratory is accredited in accordance with TNI 2016 Standards and ISO/IEC 17025:2017.
- 2. Laboratory certifies that the test results meet all TNI 2016 and ISO/IEC 17025:2017 requirements unless noted under the individual analysis
- 3. Test results relate only to the sample(s) tested.
- 4. This report shall not be reproduced except in full, without the written approval of the laboratory.
- 5. Unless otherwise noted, all analytes for this laboratory were covered under each accreditation/certification below. (DW,Water matrices)

Debbie Frank

Project Manager

10/19/2022 7:09:59 PM

2

4

5

6

7

8

1 0

12

13

Client: City & County of Honolulu Project/Site: INTERA - Red-Hill-Incident Laboratory Job ID: 380-12276-1

Table of Contents

| Cover Page | 1 |
|------------------------|----|
| Table of Contents | 3 |
| Definitions/Glossary | 4 |
| Case Narrative | 5 |
| Detection Summary | 6 |
| Client Sample Results | 7 |
| Surrogate Summary | 8 |
| QC Sample Results | 9 |
| QC Association Summary | 12 |
| Lab Chronicle | 13 |
| Method Summary | 14 |
| Sample Summary | 15 |
| Subcontract Data | 16 |
| Chain of Custody | 43 |
| Receint Checklists | 47 |

4

5

9

10

12

. .

Definitions/Glossary

Client: City & County of Honolulu Job ID: 380-12276-1

Project/Site: INTERA - Red-Hill-Incident

Glossary

| Abbreviation | These commonly used abbreviations may or may not be present in this report. |
|----------------|---|
| ¤ | Listed under the "D" column to designate that the result is reported on a dry weight basis |
| %R | Percent Recovery |
| CFL | Contains Free Liquid |
| CFU | Colony Forming Unit |
| CNF | Contains No Free Liquid |
| DER | Duplicate Error Ratio (normalized absolute difference) |
| Dil Fac | Dilution Factor |
| DL | Detection Limit (DoD/DOE) |
| DL, RA, RE, IN | Indicates a Dilution, Re-analysis, Re-extraction, or additional Initial metals/anion analysis of the sample |
| DLC | Decision Level Concentration (Radiochemistry) |
| EDL | Estimated Detection Limit (Dioxin) |
| LOD | Limit of Detection (DoD/DOE) |
| LOQ | Limit of Quantitation (DoD/DOE) |
| MCL | EPA recommended "Maximum Contaminant Level" |
| MDA | Minimum Detectable Activity (Radiochemistry) |
| MDC | Minimum Detectable Concentration (Radiochemistry) |
| MDL | Method Detection Limit |
| ML | Minimum Level (Dioxin) |
| MPN | Most Probable Number |
| MQL | Method Quantitation Limit |
| NC | Not Calculated |
| ND | Not Detected at the reporting limit (or MDL or EDL if shown) |

POS Positive / Present PQL Practical Quantitation Limit **PRES** Presumptive

NEG

QC

RER Relative Error Ratio (Radiochemistry)

Quality Control

Negative / Absent

Reporting Limit or Requested Limit (Radiochemistry) RL

RPD Relative Percent Difference, a measure of the relative difference between two points

TEF Toxicity Equivalent Factor (Dioxin) TEQ Toxicity Equivalent Quotient (Dioxin)

TNTC Too Numerous To Count

Case Narrative

Client: City & County of Honolulu Project/Site: INTERA - Red-Hill-Incident Job ID: 380-12276-1

Job ID: 380-12276-1

Laboratory: Eurofins Eaton Monrovia

Narrative

Job Narrative 380-12276-1

Comments

ND on SubContract Lab reports for this project:

MDL is listed due to report format restrictions; it is not used in reporting. Analytical results reported are ND at the RL.

Receipt

The sample was received on 7/27/2022 9:15 AM. Unless otherwise noted below, the sample arrived in good condition, and where required, properly preserved and on ice.

Subcontract non-Sister

See attached subcontract report.

Subcontract Work

Method 625 PAH Physis LL (EAL) + TICs: This method was subcontracted to Physis Environmental Laboratories. The subcontract laboratory certification is different from that of the facility issuing the final report.

Detection Summary

Client: City & County of Honolulu Project/Site: INTERA - Red-Hill-Incident

Client Sample ID: BWS2253-J1-AQ

Job ID: 380-12276-1

Lab Sample ID: 380-12276-1

| Analyte | Result Qualifier | RL | MDL | Unit | Dil Fac D | Method | Prep Type |
|------------------------|------------------|-------|-------|------|-----------|-----------------|-----------|
| Benzo[a]pyrene | 0.00545 | 0.005 | 0.001 | μg/L | | 625 PAH Physis | Total/NA |
| | | | | | | LL (EAL) + TICs | |
| Benzo[e]pyrene | 0.00819 | 0.005 | 0.001 | μg/L | 1 | 625 PAH Physis | Total/NA |
| | | | | | | LL (EAL) + TICs | |
| Benzo[g,h,i]perylene | 0.0373 | 0.005 | 0.001 | μg/L | 1 | 625 PAH Physis | Total/NA |
| | | | | | | LL (EAL) + TICs | |
| Fluoranthene | 0.02 | 0.005 | 0.001 | μg/L | 1 | 625 PAH Physis | Total/NA |
| | | | | | | LL (EAL) + TICs | |
| Indeno[1,2,3-cd]pyrene | 0.0103 | 0.005 | 0.001 | μg/L | 1 | 625 PAH Physis | Total/NA |
| | | | | | | LL (EAL) + TICs | |
| Phenanthrene | 0.00753 | 0.005 | 0.001 | μg/L | 1 | 625 PAH Physis | Total/NA |
| | | | | | | LL (EAL) + TICs | |
| Pyrene | 0.121 | 0.005 | 0.001 | μg/L | 1 | 625 PAH Physis | Total/NA |
| | | | | | | LL (EAL) + TICs | |

4

5

7

a

10

12

1 /

Client Sample Results

Client: City & County of Honolulu Project/Site: INTERA - Red-Hill-Incident

Lab Sample ID: 380-12276-1

Job ID: 380-12276-1

Matrix: Drinking Water

Client Sample ID: BWS2253-J1-AQ

Date Collected: 07/26/22 09:30 Date Received: 07/27/22 09:15

| Analyte | Result | Qualifier | RL | MDL | Unit | D | Prepared | Analyzed | Dil Fac |
|------------------------------|-----------|-----------|----------|-------|------|---|----------------|----------------|---------|
| 1-Methylnaphthalene | ND | | 0.005 | 0.001 | μg/L | | 07/27/22 00:00 | 07/31/22 22:28 | 1 |
| 1-Methylphenanthrene | ND | | 0.005 | 0.001 | μg/L | | 07/27/22 00:00 | 07/31/22 22:28 | 1 |
| 2,3,5-Trimethylnaphthalene | ND | | 0.005 | 0.001 | μg/L | | 07/27/22 00:00 | 07/31/22 22:28 | 1 |
| 2,6-Dimethylnaphthalene | ND | | 0.005 | 0.001 | μg/L | | 07/27/22 00:00 | 07/31/22 22:28 | 1 |
| 2-Methylnaphthalene | ND | | 0.005 | 0.001 | μg/L | | 07/27/22 00:00 | 07/31/22 22:28 | 1 |
| Acenaphthene | ND | | 0.005 | 0.001 | μg/L | | 07/27/22 00:00 | 07/31/22 22:28 | 1 |
| Acenaphthylene | ND | | 0.005 | 0.001 | μg/L | | 07/27/22 00:00 | 07/31/22 22:28 | 1 |
| Anthracene | ND | | 0.005 | 0.001 | μg/L | | 07/27/22 00:00 | 07/31/22 22:28 | 1 |
| Benz[a]anthracene | ND | | 0.005 | 0.001 | μg/L | | 07/27/22 00:00 | 07/31/22 22:28 | 1 |
| Benzo[a]pyrene | 0.00545 | | 0.005 | 0.001 | μg/L | | 07/27/22 00:00 | 07/31/22 22:28 | 1 |
| Benzo[b]fluoranthene | ND | | 0.005 | 0.001 | μg/L | | 07/27/22 00:00 | 07/31/22 22:28 | 1 |
| Benzo[e]pyrene | 0.00819 | | 0.005 | 0.001 | μg/L | | 07/27/22 00:00 | 07/31/22 22:28 | 1 |
| Benzo[g,h,i]perylene | 0.0373 | | 0.005 | 0.001 | μg/L | | 07/27/22 00:00 | 07/31/22 22:28 | 1 |
| Benzo[k]fluoranthene | ND | | 0.005 | 0.001 | μg/L | | 07/27/22 00:00 | 07/31/22 22:28 | 1 |
| Biphenyl | ND | | 0.005 | 0.001 | μg/L | | 07/27/22 00:00 | 07/31/22 22:28 | 1 |
| Chrysene | ND | | 0.005 | 0.001 | μg/L | | 07/27/22 00:00 | 07/31/22 22:28 | 1 |
| Dibenz[a,h]anthracene | ND | | 0.005 | 0.001 | μg/L | | 07/27/22 00:00 | 07/31/22 22:28 | 1 |
| Dibenzo[a,l]pyrene | ND | | 0.005 | 0.001 | μg/L | | 07/27/22 00:00 | 07/31/22 22:28 | 1 |
| Dibenzothiophene | ND | | 0.005 | 0.001 | μg/L | | 07/27/22 00:00 | 07/31/22 22:28 | 1 |
| Disalicylidenepropanediamine | ND | | 0.1 | 0.05 | μg/L | | 07/27/22 00:00 | 07/31/22 22:28 | 1 |
| Fluoranthene | 0.02 | | 0.005 | 0.001 | μg/L | | 07/27/22 00:00 | 07/31/22 22:28 | 1 |
| Fluorene | ND | | 0.005 | 0.001 | μg/L | | 07/27/22 00:00 | 07/31/22 22:28 | 1 |
| Indeno[1,2,3-cd]pyrene | 0.0103 | | 0.005 | 0.001 | μg/L | | 07/27/22 00:00 | 07/31/22 22:28 | 1 |
| Naphthalene | ND | | 0.005 | 0.001 | μg/L | | 07/27/22 00:00 | 07/31/22 22:28 | 1 |
| Perylene | ND | | 0.005 | 0.001 | μg/L | | 07/27/22 00:00 | 07/31/22 22:28 | 1 |
| Phenanthrene | 0.00753 | | 0.005 | 0.001 | μg/L | | 07/27/22 00:00 | 07/31/22 22:28 | 1 |
| Pyrene | 0.121 | | 0.005 | 0.001 | μg/L | | 07/27/22 00:00 | 07/31/22 22:28 | 1 |
| Surrogate | %Recovery | Qualifier | Limits | | | | Prepared | Analyzed | Dil Fac |
| (d10-Acenaphthene) | 80 | | 45 - 118 | | | | 07/27/22 00:00 | 07/31/22 22:28 | 1 |
| (d10-Phenanthrene) | 84 | | 56 - 123 | | | | 07/27/22 00:00 | 07/31/22 22:28 | 1 |
| (d12-Chrysene) | 61 | | 36 - 142 | | | | 07/27/22 00:00 | 07/31/22 22:28 | 1 |
| (d12-Perylene) | 73 | | 36 - 161 | | | | 07/27/22 00:00 | 07/31/22 22:28 | 1 |
| (d8-Naphthalene) | 82 | | 20 - 112 | | | | 07/27/22 00:00 | 07/31/22 22:28 | 1 |

Surrogate Summary

Client: City & County of Honolulu Project/Site: INTERA - Red-Hill-Incident Job ID: 380-12276-1

Method: 625 PAH Physis LL (EAL) + TICs - EPA 625 Base/Neutral and Acid Organics i

Matrix: Drinking Water Prep Type: Total/NA

| | | | Pe | rcent Surr | ogate Reco | very (Acce |
|---------------|------------------|----------|----------|------------|------------|------------|
| | | Acenapht | Phenanth | CRY | NPT | PRY |
| Lab Sample ID | Client Sample ID | (45-118) | (56-123) | (36-142) | (20-112) | (36-161) |
| 380-12276-1 | BWS2253-J1-AQ | 80 | 84 | 61 | 82 | 73 |

Surrogate Legend

(d10-Acenaphthene) = (d10-Acenaphthene) (d10-Phenanthrene) = (d10-Phenanthrene)

CRY = (d12-Chrysene) NPT = (d8-Naphthalene) PRY = (d12-Perylene)

Method: 625 PAH Physis LL (EAL) + TICs - EPA 625 Base/Neutral and Acid Organics i

Matrix: water Prep Type: Total/NA

| Acenapht Phenanth CRY NPT PRN |
|---|
| 98722-B1 Method Blank 98 97 92 99 87 |
| |
| 98722-BS1 Lab Control Sample 101 98 101 98 87 |
| |
| 98722-BS2 Lab Control Sample Dup 100 99 107 98 85 |

(d10-Acenaphthene) = (d10-Acenaphthene) (d10-Phenanthrene) = (d10-Phenanthrene)

CRY = (d12-Chrysene) NPT = (d8-Naphthalene) PRY = (d12-Perylene)

Eurofins Eaton Monrovia

Client: City & County of Honolulu

Project/Site: INTERA - Red-Hill-Incident

Job ID: 380-12276-1

Method: 625 PAH Physis LL (EAL) + TICs - EPA 625 Base/Neutral and Acid Organics i

Lab Sample ID: 98722-B1

Matrix: water

Analysis Batch: O-38064

Client Sample ID: Method Blank Prep Type: Total/NA Prep Batch: O-38064_P

| | Blank | Blank | | | | | | | |
|------------------------------|--------|-----------|-------|-------|------|---|----------------|----------------|---------|
| Analyte | Result | Qualifier | RL | MDL | Unit | D | Prepared | Analyzed | Dil Fac |
| 1-Methylnaphthalene | ND | | 0.005 | 0.001 | μg/L | | 07/25/22 00:00 | 07/31/22 06:55 | 1 |
| 1-Methylphenanthrene | ND | | 0.005 | 0.001 | μg/L | | 07/25/22 00:00 | 07/31/22 06:55 | 1 |
| 2,3,5-Trimethylnaphthalene | ND | | 0.005 | 0.001 | μg/L | | 07/25/22 00:00 | 07/31/22 06:55 | 1 |
| 2,6-Dimethylnaphthalene | ND | | 0.005 | 0.001 | μg/L | | 07/25/22 00:00 | 07/31/22 06:55 | 1 |
| 2-Methylnaphthalene | ND | | 0.005 | 0.001 | μg/L | | 07/25/22 00:00 | 07/31/22 06:55 | 1 |
| Acenaphthene | ND | | 0.005 | 0.001 | μg/L | | 07/25/22 00:00 | 07/31/22 06:55 | 1 |
| Acenaphthylene | ND | | 0.005 | 0.001 | μg/L | | 07/25/22 00:00 | 07/31/22 06:55 | 1 |
| Anthracene | ND | | 0.005 | 0.001 | μg/L | | 07/25/22 00:00 | 07/31/22 06:55 | 1 |
| Benz[a]anthracene | ND | | 0.005 | 0.001 | μg/L | | 07/25/22 00:00 | 07/31/22 06:55 | 1 |
| Benzo[a]pyrene | ND | | 0.005 | 0.001 | μg/L | | 07/25/22 00:00 | 07/31/22 06:55 | 1 |
| Benzo[b]fluoranthene | ND | | 0.005 | 0.001 | μg/L | | 07/25/22 00:00 | 07/31/22 06:55 | 1 |
| Benzo[e]pyrene | ND | | 0.005 | 0.001 | μg/L | | 07/25/22 00:00 | 07/31/22 06:55 | 1 |
| Benzo[g,h,i]perylene | ND | | 0.005 | 0.001 | μg/L | | 07/25/22 00:00 | 07/31/22 06:55 | 1 |
| Benzo[k]fluoranthene | ND | | 0.005 | 0.001 | μg/L | | 07/25/22 00:00 | 07/31/22 06:55 | 1 |
| Biphenyl | ND | | 0.005 | 0.001 | μg/L | | 07/25/22 00:00 | 07/31/22 06:55 | 1 |
| Chrysene | ND | | 0.005 | 0.001 | μg/L | | 07/25/22 00:00 | 07/31/22 06:55 | 1 |
| Dibenz[a,h]anthracene | ND | | 0.005 | 0.001 | μg/L | | 07/25/22 00:00 | 07/31/22 06:55 | 1 |
| Dibenzo[a,l]pyrene | ND | | 0.005 | 0.001 | μg/L | | 07/25/22 00:00 | 07/31/22 06:55 | 1 |
| Dibenzothiophene | ND | | 0.005 | 0.001 | μg/L | | 07/25/22 00:00 | 07/31/22 06:55 | 1 |
| Disalicylidenepropanediamine | ND | | 0.1 | 0.05 | μg/L | | 07/25/22 00:00 | 07/31/22 06:55 | 1 |
| Fluoranthene | ND | | 0.005 | 0.001 | μg/L | | 07/25/22 00:00 | 07/31/22 06:55 | 1 |
| Fluorene | ND | | 0.005 | 0.001 | μg/L | | 07/25/22 00:00 | 07/31/22 06:55 | 1 |
| Indeno[1,2,3-cd]pyrene | ND | | 0.005 | 0.001 | μg/L | | 07/25/22 00:00 | 07/31/22 06:55 | 1 |
| Naphthalene | ND | | 0.005 | 0.001 | μg/L | | 07/25/22 00:00 | 07/31/22 06:55 | 1 |
| Perylene | ND | | 0.005 | 0.001 | μg/L | | 07/25/22 00:00 | 07/31/22 06:55 | 1 |
| Phenanthrene | ND | | 0.005 | 0.001 | μg/L | | 07/25/22 00:00 | 07/31/22 06:55 | 1 |
| Pyrene | ND | | 0.005 | 0.001 | μg/L | | 07/25/22 00:00 | 07/31/22 06:55 | 1 |

| Blank | Blank |
|-------|-------|

| 5 | Surrogate | %Recovery | Qualifier | Limits | Prepared | Analyzed | Dil Fac |
|----|-------------------|-----------|-----------|----------|----------------|----------------|---------|
| (| d10-Acenaphthene) | 98 | | 65 - 113 | 07/25/22 00:00 | 07/31/22 06:55 | 1 |
| (| d10-Phenanthrene) | 97 | | 80 - 111 | 07/25/22 00:00 | 07/31/22 06:55 | 1 |
| (| d12-Chrysene) | 92 | | 60 - 139 | 07/25/22 00:00 | 07/31/22 06:55 | 1 |
| (| d12-Perylene) | 87 | | 36 - 161 | 07/25/22 00:00 | 07/31/22 06:55 | 1 |
| 10 | d8-Naphthalene) | 99 | | 44 - 119 | 07/25/22 00:00 | 07/31/22 06:55 | 1 |

Lab Sample ID: 98722-BS1

Matrix: water

Analysis Batch: O-38064

Client Sample ID: Lab Control Sample
Prep Type: Total/NA
Prep Batch: O-38064_P

| | Spike | LCS | LCS | | | | %Rec | |
|----------------------------|-------|--------|-----------|------|---|------|----------|--|
| Analyte | Added | Result | Qualifier | Unit | D | %Rec | Limits | |
| 1-Methylnaphthalene | 0.5 | 0.478 | | μg/L | | 96 | 49 - 117 | |
| 1-Methylphenanthrene | 0.5 | 0.414 | | μg/L | | 83 | 66 - 127 | |
| 2,3,5-Trimethylnaphthalene | 0.5 | 0.453 | | μg/L | | 91 | 57 - 120 | |
| 2,6-Dimethylnaphthalene | 0.5 | 0.463 | | μg/L | | 93 | 54 - 117 | |
| 2-Methylnaphthalene | 0.5 | 0.484 | | μg/L | | 97 | 47 - 130 | |
| Acenaphthene | 0.5 | 0.471 | | μg/L | | 94 | 53 - 131 | |
| Acenaphthylene | 0.5 | 0.475 | | μg/L | | 95 | 43 - 140 | |
| Anthracene | 0.5 | 0.434 | | μg/L | | 87 | 58 - 135 | |

Eurofins Eaton Monrovia

Page 9 of 47 10/19/2022

2

3

5

7

9

10

12

14

Job ID: 380-12276-1

Client: City & County of Honolulu Project/Site: INTERA - Red-Hill-Incident

Method: 625 PAH Physis LL (EAL) + TICs - EPA 625 Base/Neutral and Acid Organics i (Continued)

Lab Sample ID: 98722-BS1

Matrix: water

Analysis Batch: O-38064

Client Sample ID: Lab Control Sample Prep Type: Total/NA

Prep Batch: O-38064_P

| | Spike | LCS | LCS | | | | %Rec | |
|------------------------------|-------|--------|-----------|------|---|------|----------|--|
| Analyte | Added | Result | Qualifier | Unit | D | %Rec | Limits | |
| Benz[a]anthracene | 0.5 | 0.401 | | μg/L | | 80 | 55 - 145 | |
| Benzo[a]pyrene | 0.5 | 0.415 | | μg/L | | 83 | 51 - 143 | |
| Benzo[b]fluoranthene | 0.5 | 0.496 | | μg/L | | 99 | 46 - 165 | |
| Benzo[e]pyrene | 0.5 | 0.454 | | μg/L | | 91 | 42 - 152 | |
| Benzo[g,h,i]perylene | 0.5 | 0.438 | | μg/L | | 88 | 63 - 133 | |
| Benzo[k]fluoranthene | 0.5 | 0.445 | | μg/L | | 89 | 56 - 145 | |
| Biphenyl | 0.5 | 0.485 | | μg/L | | 97 | 56 - 119 | |
| Chrysene | 0.5 | 0.432 | | μg/L | | 86 | 56 - 141 | |
| Dibenz[a,h]anthracene | 0.5 | 0.437 | | μg/L | | 87 | 55 - 150 | |
| Dibenzo[a,l]pyrene | 0.25 | 0.202 | | μg/L | | 81 | 50 - 150 | |
| Dibenzothiophene | 0.5 | 0.449 | | μg/L | | 90 | 75 - 113 | |
| Disalicylidenepropanediamine | 10 | 9.48 | | μg/L | | 95 | 50 - 150 | |
| Fluoranthene | 0.5 | 0.436 | | μg/L | | 87 | 60 - 146 | |
| Fluorene | 0.5 | 0.469 | | μg/L | | 94 | 58 - 131 | |
| Indeno[1,2,3-cd]pyrene | 0.5 | 0.435 | | μg/L | | 87 | 50 - 151 | |
| Naphthalene | 0.5 | 0.479 | | μg/L | | 96 | 41 - 126 | |
| Perylene | 0.5 | 0.397 | | μg/L | | 79 | 48 - 141 | |
| Phenanthrene | 0.5 | 0.458 | | μg/L | | 92 | 67 - 127 | |
| Pyrene | 0.5 | 0.411 | | μg/L | | 82 | 54 - 156 | |

LCS LCS

| Surrogate | %Recovery | Qualifier | Limits |
|--------------------|-----------|-----------|----------|
| (d10-Acenaphthene) | 101 | | 65 - 113 |
| (d10-Phenanthrene) | 98 | | 80 - 111 |
| (d12-Chrysene) | 101 | | 60 - 139 |
| (d12-Perylene) | 87 | | 36 - 161 |
| (d8-Naphthalene) | 98 | | 44 - 119 |

Lab Sample ID: 98722-BS2

Matrix: water

Analysis Batch: O-38064

Client Sample ID: Lab Control Sample Dup Prep Type: Total/NA

Prep Batch: O-38064_P

Spike LCS DUP LCS DUP %Rec RPD Analyte Added Result Qualifier Unit D %Rec Limits **RPD** Limit 1-Methylnaphthalene 0.5 0.48 96 49 - 117 30 µg/L n 1-Methylphenanthrene 0.5 0.431 μg/L 86 66 - 127 4 30 2,3,5-Trimethylnaphthalene 0.5 0.466 μg/L 93 57 - 120 2 30 94 30 2,6-Dimethylnaphthalene 0.5 0.47 µg/L 54 - 117 2-Methylnaphthalene 0.5 0.489 µg/L 98 47 - 130 30 Acenaphthene 0.5 0.472 94 53 - 131 0 30 µg/L 0.478 Acenaphthylene 0.5 μg/L 96 43 - 140 30 Anthracene 0.5 0.447 µg/L 89 58 - 135 30 Benz[a]anthracene 0.5 0.43 µg/L 86 55 - 145 30 0.5 87 51 - 143 30 Benzo[a]pyrene 0.436 μg/L Benzo[b]fluoranthene 0.5 0.531 106 46 - 165 30 μg/L Benzo[e]pyrene 0.5 0.48 µg/L 96 42 - 152 30 Benzo[g,h,i]perylene 0.5 0.444 µg/L 89 63 - 133 30 Benzo[k]fluoranthene 0.5 0.473 95 30 µg/L 56 - 145 Biphenyl 0.5 0.489 µg/L 98 56 - 119 30 Chrysene 0.5 0.449 µg/L 90 56 - 141 30

Eurofins Eaton Monrovia

Page 10 of 47

QC Sample Results

Client: City & County of Honolulu Project/Site: INTERA - Red-Hill-Incident Job ID: 380-12276-1

Method: 625 PAH Physis LL (EAL) + TICs - EPA 625 Base/Neutral and Acid Organics i (Continued)

Lab Sample ID: 98722-BS2

Matrix: water

Analysis Batch: O-38064

Client Sample ID: Lab Control Sample Dup Prep Type: Total/NA

Prep Batch: O-38064_P

| LCS DUP | LCS DUP | | | | %Rec | | RPD |
|---------|---|--|--|--|---|--|--|
| Result | Qualifier | Unit | D | %Rec | Limits | RPD | Limit |
| 0.438 | | μg/L | | 88 | 55 - 150 | 1 | 30 |
| 0.213 | | μg/L | | 85 | 50 - 150 | 5 | 30 |
| 0.459 | | μg/L | | 92 | 75 - 113 | 2 | 30 |
| 9.77 | | μg/L | | 98 | 50 - 150 | 3 | 30 |
| 0.441 | | μg/L | | 88 | 60 - 146 | 1 | 30 |
| 0.474 | | μg/L | | 95 | 58 - 131 | 1 | 30 |
| 0.435 | | μg/L | | 87 | 50 - 151 | 0 | 30 |
| 0.478 | | μg/L | | 96 | 41 - 126 | 0 | 30 |
| 0.421 | | μg/L | | 84 | 48 - 141 | 6 | 30 |
| 0.468 | | μg/L | | 94 | 67 - 127 | 2 | 30 |
| 0.421 | | μg/L | | 84 | 54 - 156 | 2 | 30 |
| | Result 0.438 0.213 0.459 9.77 0.441 0.474 0.435 0.478 0.421 0.468 | 0.213 0.459 9.77 0.441 0.474 0.435 0.478 0.421 0.468 | Result Qualifier Unit 0.438 μg/L 0.213 μg/L 0.459 μg/L 9.77 μg/L 0.441 μg/L 0.474 μg/L 0.435 μg/L 0.478 μg/L 0.421 μg/L 0.468 μg/L | Result Qualifier Unit D 0.438 μg/L μg/L 0.213 μg/L μg/L 0.459 μg/L μg/L 9.77 μg/L μg/L 0.441 μg/L μg/L 0.474 μg/L μg/L 0.435 μg/L μg/L 0.478 μg/L μg/L 0.421 μg/L μg/L 0.468 μg/L μg/L | Result Qualifier Unit D %Rec 0.438 μg/L 88 0.213 μg/L 85 0.459 μg/L 92 9.77 μg/L 98 0.441 μg/L 88 0.474 μg/L 95 0.435 μg/L 87 0.478 μg/L 96 0.421 μg/L 84 0.468 μg/L 94 | Result Qualifier Unit D %Rec Limits 0.438 μg/L 88 55 - 150 0.213 μg/L 85 50 - 150 0.459 μg/L 92 75 - 113 9.77 μg/L 98 50 - 150 0.441 μg/L 88 60 - 146 0.474 μg/L 95 58 - 131 0.435 μg/L 87 50 - 151 0.478 μg/L 96 41 - 126 0.421 μg/L 84 48 - 141 0.468 μg/L 94 67 - 127 | Result Qualifier Unit D %Rec Limits RPD 0.438 μg/L 88 55 - 150 1 0.213 μg/L 85 50 - 150 5 0.459 μg/L 92 75 - 113 2 9.77 μg/L 98 50 - 150 3 0.441 μg/L 88 60 - 146 1 0.474 μg/L 95 58 - 131 1 0.435 μg/L 87 50 - 151 0 0.478 μg/L 96 41 - 126 0 0.421 μg/L 84 48 - 141 6 0.468 μg/L 94 67 - 127 2 |

LCS DUP LCS DUP

| Surrogate | %Recovery | Qualifier | Limits |
|--------------------|-----------|-----------|----------|
| (d10-Acenaphthene) | 100 | | 65 - 113 |
| (d10-Phenanthrene) | 99 | | 80 - 111 |
| (d12-Chrysene) | 107 | | 60 - 139 |
| (d12-Perylene) | 85 | | 36 - 161 |
| (d8-Naphthalene) | 98 | | 44 - 119 |

QC Association Summary

Client: City & County of Honolulu

Project/Site: INTERA - Red-Hill-Incident

Job ID: 380-12276-1

Subcontract

Analysis Batch: O-38064

| Lab Sample ID | Client Sample ID | Prep Type | Matrix | Method | Prep Batch |
|---------------|------------------------|-----------|----------------|-----------------|------------|
| 380-12276-1 | BWS2253-J1-AQ | Total/NA | Drinking Water | 625 PAH Physis | O-38064_P |
| | | | | LL (EAL) + TICs | |
| 98722-B1 | Method Blank | Total/NA | water | 625 PAH Physis | O-38064_P |
| | | | | LL (EAL) + TICs | |
| 98722-BS1 | Lab Control Sample | Total/NA | water | 625 PAH Physis | O-38064_P |
| | | | | LL (EAL) + TICs | |
| 98722-BS2 | Lab Control Sample Dup | Total/NA | water | 625 PAH Physis | O-38064_P |
| | | | | LL (EAL) + TICs | |

Prep Batch: O-38064_P

| Lab Sample ID 380-12276-1 | Client Sample ID BWS2253-J1-AQ | Prep Type Total/NA | Matrix Drinking Water | Method EPA_625 | Prep Batch |
|----------------------------------|-----------------------------------|-----------------------|--------------------------|-------------------|------------|
| 98722-B1 | Method Blank | Total/NA | water | EPA_625 | |
| 98722-BS1 | Lab Control Sample | Total/NA | water | EPA_625 | |
| 98722-BS2 | Lab Control Sample Dup | Total/NA | water | EPA_625 | |

J

4

6

0

9

10

12

13

Lab Chronicle

Client: City & County of Honolulu Job ID: 380-12276-1

Project/Site: INTERA - Red-Hill-Incident

Client Sample ID: BWS2253-J1-AQ Lab Sample ID: 380-12276-1

Date Collected: 07/26/22 09:30 Matrix: Drinking Water
Date Received: 07/27/22 09:15

| | Batch | Batch | | Dilution | Batch | | | Prepared |
|-----------|----------|-----------------------------------|-----|----------|-----------|---------|-----|----------------|
| Prep Type | Type | Method | Run | Factor | Number | Analyst | Lab | or Analyzed |
| Total/NA | Prep | EPA_625 | | 1 | O-38064_P | | | 07/27/22 00:00 |
| Total/NA | Analysis | 625 PAH Physis LL (EAL) + TICs | | 1 | O-38064 | YC | | 07/31/22 22:28 |

Laboratory References:

= Physis Environmental Laboratories, 1904 Wright Circle, Anaheim, CA 92806

3

4

Q

10

4.0

Method Summary

Client: City & County of Honolulu Project/Site: INTERA - Red-Hill-Incident Job ID: 380-12276-1

| Method | Method Description | Protocol | Laboratory |
|--------|--|----------|------------|
| 625 | EPA 625 Base/Neutral and Acid Organics i | EPA | |

Protocol References:

EPA = US Environmental Protection Agency

Laboratory References:

= Physis Environmental Laboratories, 1904 Wright Circle, Anaheim, CA 92806

9

11

10

14

Sample Summary

Client: City & County of Honolulu Project/Site: INTERA - Red-Hill-Incident

Job ID: 380-12276-1

| Lab Sample ID | Client Sample ID | Matrix | Collected | Received |
|---------------|------------------|----------------|----------------|----------------|
| 380-12276-1 | BWS2253-J1-AQ | Drinking Water | 07/26/22 09:30 | 07/27/22 09:15 |

-4

6

9

10

11

13

14



August 08, 2022

Debbie Frank **Eurofins Eaton Analytical** 750 Royal Oaks Drive Suite 100 Monrovia, CA 91016-

Project Name: **RED HILL** Physis Project ID: 1407003-257

Dear Debbie,

Enclosed are the analytical results for the sample submitted to PHYSIS Environmental Laboratories, Inc. (PHYSIS) on 7/27/2022. A total of 1 sample was received for analysis in accordance with the attached chain of custody (COC). Per the COC, the sample was analyzed for:

| Organics | |
|--|--|
| Polynuclear Aromatic Hydrocarbons by EPA 625.1 | |
| Disalicylidenepropanediamine by EPA 625.1 | |
| Dibenzo [a,l] Pyrene w/ PAHs by EPA 625.1 | |

Analytical results in this report apply only to samples submitted to PHYSIS in accordance with the COC and are intended to be considered in their entirety.

Please feel free to contact me at any time with any questions. PHYSIS appreciates the opportunity to provide you with our analytical and support services.

Regards,

W Dokt Dream Misty Mercier 714 602-5320 Extension 202

mistymercier@physislabs.com



PROJECT SAMPLE LIST

Eurofins Eaton Analytical RED HILL

PHYSIS Project ID: 1407003-257

Total Samples: 1

| PHYSIS ID | Sample ID | Description | Date | Time | Matrix | Sample Type |
|-----------|---------------|-------------|-----------|------|-------------|---------------|
| 98723 | BWS2253-J1-AQ | | 7/26/2022 | 9:30 | Samplewater | Not Specified |



ABBREVIATIONS and ACRONYMS

| QM | Quality Manual |
|------|--|
| QA | Quality Assurance |
| QC | Quality Control |
| MDL | method detection limit |
| RL | reporting limit |
| R1 | project sample |
| R2 | project sample replicate |
| MS1 | matrix spike |
| MS2 | matrix spike replicate |
| B1 | procedural blank |
| B2 | procedural blank replicate |
| BS1 | blank spike |
| BS2 | blank spike replicate |
| LCS1 | laboratory control spike |
| LCS2 | laboratory control spike replicate |
| LCM1 | laboratory control material |
| LCM2 | laboratory control material replicate |
| CRM1 | certified reference material |
| CRM2 | certified reference material replicate |
| RPD | relative percent difference |
| LMW | low molecular weight |
| HMW | high molecular weight |



QUALITY ASSURANCE SUMMARY

LABORATORY BATCH: Physis' QM defines a laboratory batch as a group of 20 or fewer project samples of similar matrix, processed together under the same conditions and with the same reagents. QC samples are associated with each batch and were used to assess the validity of the sample analyses.

PROCEDURAL BLANK: Laboratory contamination introduced during method use is assessed through the preparation and analysis of procedural blanks is provided at a minimum frequency of one per batch.

ACCURACY: Accuracy of analytical measurements is the degree of closeness based on percent recovery calculations between measured values and the actual or true value and includes a combination of reproducibility error and systematic bias due to sampling and analytical operations. Accuracy of the project data was indicated by analysis of MS, BS, LCS, LCM, CRM, and/or surrogate spikes on a minimum frequency of one per batch. Physis' QM requires that 95% of the target compounds greater than 10 times the MDL be within the specified acceptance limits.

PRECISION: Precision is the agreement among a set of replicate measurements without assumption of knowledge of the true value and is based on RPD calculations between repeated values. Precision of the project data was determined by analysis of replicate MS1/MS2, BS1/BS2, LCS1/LCS2, LCM1/LCM2, CRM1/CRM2, surrogate spikes and/or replicate project sample analysis (R1/R2) on a minimum frequency of one per batch. Physis' QM requires that for 95% of the compounds greater than 10 times the MDL, the percent RPD should be within the specified acceptance range.

BLANK SPIKES: BS is the introduction of a known concentration of analyte into the procedural blank. BS demonstrates performance of the preparation and analytical methods on a clean matrix void of potential matrix related interferences. The BS is performed in laboratory deionized water, making these recoveries a better indicator of the efficiency of the laboratory method per se.

MATRIX SPIKES: MS is the introduction of a known concentration of analyte into a sample. MS samples demonstrate the effect a particular project sample matrix has on the accuracy of a measurement. Individually, MS samples also indicate the bias of analytical measurements due to chemical interferences inherent in the in the specific project sample spiked. Intrinsic target analyte concentration in the specific project sample can also significantly impact MS recovery.

CERTIFIED REFERENCE MATERIALS: CRMs are materials of various matrices for which analytical information has been determined and certified by a recognized authority. These are used to provide a quantitative assessment of the accuracy of an analytical method. CRMs provide evidence that the laboratory preparation and analysis produces results that are comparable to those obtained by an independent organization.

LABORATORY CONTROL MATERIAL: LCM is provided because a suitable natural seawater CRM is not available and can be used to indicate accuracy of the method. Physis' internal LCM is seawater collected at ~800 meters in the Southern California San Pedro Basin and can be used as a reference for background concentrations in clean, natural seawater for comparison to project samples.

LABORATORY CONTROL SPIKES: LCS is the introduction of a known concentration of analyte into Physis' LCM. LCS samples were employed to assess the effect the seawater matrix has on the accuracy of a measurement. LCS also indicate the bias of this method due to chemical interferences inherent in the in the seawater matrix. Intrinsic LCM concentration can also significantly impact LCS recovery.

SURROGATES: A surrogate is a pure analyte unlikely to be found in any project sample, behaves similarly to

i - 4 of 6

3

6

9

10

12

13



the target analyte and most often used with organic analytical procedures. Surrogates are added in known concentration to all samples and are measured to indicate overall efficiency of the method including processing and analyses.

HOLDING TIME: Method recommended holding times are the length of time a project sample can be stored under specific conditions after collection and prior to analysis without significantly affecting the analyte's concentration. Holding times can be extended if preservation techniques are employed to reduce biodegradation, volatilization, oxidation, sorption, precipitation, and other physical and chemical processes.

SAMPLE STORAGE/RETENTION: In order to maintain chemical integrity prior to analysis, all samples submitted to Physis are refrigerated (liquids) or frozen (solids) upon receipt unless otherwise recommended by applicable methods. Solid samples are retained for 1 year from collection while liquid samples are retained until method recommended holding times elapse.

TOTAL/DISSOLVED FRACTION: In some instances, the results for the dissolved fraction may be higher than the total fraction for a particular analyte (e.g. trace metals). This is typically caused by the analytical variation for each result and indicates that the target analyte is primarily in the dissolved phase, within the sample.



PHYSIS QUALIFIER CODES

| CODE | DEFINITION |
|------|---|
| # | see Case Narrative |
| ND | analyte not detected at or above the MDL |
| В | analyte was detected in the procedural blank greater than 10 times the MDL |
| E | analyte concentration exceeds the upper limit of the linear calibration range, reported value is estimated |
| Н | sample received and/or analyzed past the recommended holding time |
| J | analyte was detected at a concentration below the RL and above the MDL, reported value is estimated |
| N | insufficient sample, analysis could not be performed |
| M | analyte was outside the specified accuracy and/or precision acceptance limits due to matrix interference. The associated B/BS were within limits, therefore the sample data was reported without further clarification |
| SH | analyte concentration in the project sample exceeded the spike concentration, therefore accuracy and/or precision acceptance limits do not apply |
| SL | analyte results were lower than 10 times the MDL, therefore accuracy and/or precision acceptance limits do not apply |
| NH | project sample was heterogeneous and sample homogeneity could not be readily achieved using routine laboratory practices, therefore accuracy and/or precision acceptance limits do not apply |
| Q | analyte was outside the specified QAPP acceptance limits for precision and/or accuracy but within Physis derived acceptance limits, therefore the sample data was reported without further clarification |
| R | Physis' QM allows for 5% of the target compounds greater than 10 times the MDL to be outside the specified acceptance limits for precision and/or accuracy. This is often due to random error and does not indicate any significant problems with the analysis of these project samples |

i - 6 of 6



CASE NARRATIVE

QUALIFIER NOTES

In addition to the use of analyte specific Physis Qualifier Codes where applicable, the following were also noted.

ND

MDL is listed due to report format restrictions; it is not used in reporting. Analytical results reported are ND at the RL.

3

4

5

6


0

9

10

12

13

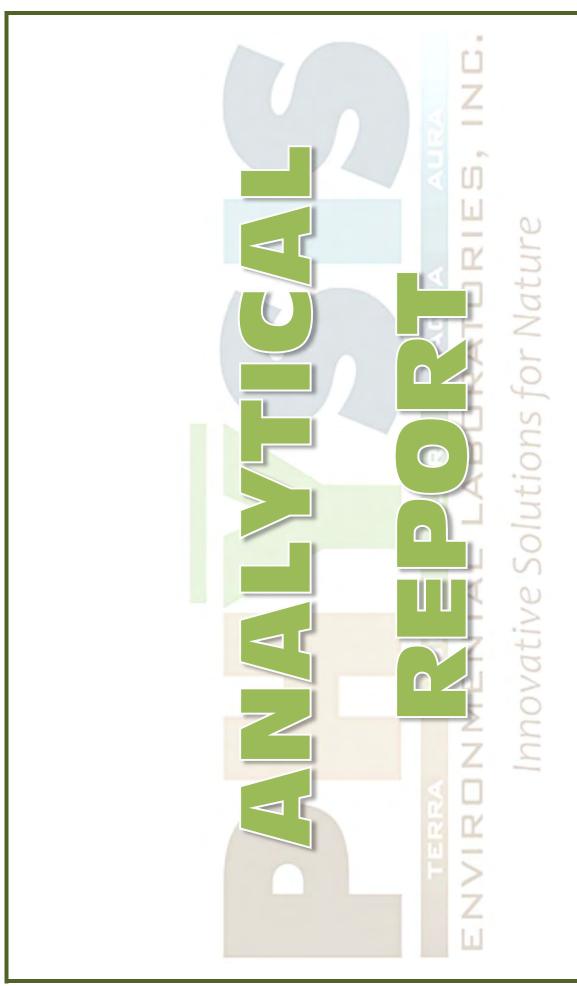



Project: RED HILL

Base/Neutral Extractable Compounds

| | | _ 0.0 0 1 | | | | | | | | |
|---|-----------|-----------|----------|----------------|-----------|-----------|----------|------------------|-----------------------|---------------|
| ANALYTE | Method | Units | RESULT | DF | MDL | RL | Fraction | QA CODE Batch ID | Date Processed | Date Analyzed |
| Sample ID: 98723-R1 BWS2253-J1-AQ Matrix: Samplewater | | | Sampled: | 26-Jul-22 9:30 | Received: | 27-Jul-22 | | | | |
| Disalicylidenepropanediamine | EPA 625.1 | µg/L | ND | 1 | 0.05 | 0.1 | Total | 0-38064 | 27- Jul-22 | 31- Jul-22 |

10/19/2022



Project: RED HILL

Polynuclear Aromatic Hydrocarbons

| mpled: 26-Jul-22 Total Total | O-38064 27 | eceived: | te Analyzed 27-Jul-22 |
|------------------------------|---|--|---|
| Total Total | O-38064 27 | | 27-Jul-22 |
| Total | · · · · · | 7-Jul-22 3 ⁻ | |
| | O-38064 27 | _ | 31-Jul-22 |
| Total | | 7-Jul-22 3 ⁻ | 31-Jul-22 |
| | O-38064 27 | 7-Jul-22 3 ⁻ | 31-Jul-22 |
| Total | O-38064 27 | 7-Jul-22 3 ⁻ | 31-Jul-22 |
| Total | O-38064 27 | 7-Jul-22 3 ⁻ | 31-Jul-22 |
| Total | O-38064 27 | 7-Jul-22 3 ⁻ | 31-Jul-22 |
| Total | O-38064 27 | 7-Jul-22 3 [.] | 31-Jul-22 |
| Total | O-38064 27 | 7-Jul-22 3 ⁻ | 31-Jul-22 |
| Total | O-38064 27 | 7-Jul-22 3 ⁻ | 31-Jul-22 |
| Total | O-38064 27 | 7-Jul-22 3 ⁻ | 31-Jul-22 |
| Total | O-38064 27 | 7-Jul-22 3 ⁻ | 31-Jul-22 |
| Total | O-38064 27 | 7-Jul-22 3 ⁻ | 31-Jul-22 |
| Total | O-38064 27 | 7-Jul-22 3 ⁻ | 31-Jul-22 |
| Total | O-38064 27 | 7-Jul-22 3 | 31-Jul-22 |
| Total | O-38064 27 | 7-Jul-22 3 | 31-Jul-22 |
| Total | O-38064 27 | 7-Jul-22 3 | 31-Jul-22 |
| Total | O-38064 27 | 7-Jul-22 3 | 31-Jul-22 |
| Total | O-38064 27 | 7-Jul-22 3 | 31-Jul-22 |
| Total | O-38064 27 | 7-Jul-22 3 | 31-Jul-22 |
| | O-38064 27 | 7-Jul-22 3 | 31-Jul-22 |
| Total | | 7-Jul-22 3 | 31-Jul-22 |
| | O-38064 27 | , | |
| Total | | - | 31-Jul-22 |
| Total Total | O-38064 27 | 7-Jul-22 3 ⁻ | 31-Jul-22 31-Jul-22 |
| | Total Total Total Total Total Total Total Total Total | Total O-38064 27 | Total O-38064 27-Jul-22 3 Total O-38064 27-Jul-22 3 |

1904 E. Wright Circle, Anaheim CA 92806

main: (714) 602-5320

fax: (714) 602-5321

www.physislabs.com

info@physislabs.com

CA ELAP #2769

ar - 2 of 3

6

10

12



Project: RED HILL

Polynuclear Aromatic Hydrocarbons

| | | | | | | , | | | | |
|------------------------|-----------|-------|---------|----|-------|-------|----------|------------------|-----------------------|--------------|
| ANALYTE | Method | Units | RESULT | DF | MDL | RL | Fraction | QA CODE Batch ID | Date Processed | Date Analyze |
| Fluoranthene | EPA 625.1 | μg/L | 0.02 | 1 | 0.001 | 0.005 | Total | 0-38064 | 27-Jul-22 | 31-Jul-22 |
| Fluorene | EPA 625.1 | μg/L | ND | 1 | 0.001 | 0.005 | Total | 0-38064 | 27-Jul-22 | 31-Jul-22 |
| Indeno[1,2,3-cd]pyrene | EPA 625.1 | μg/L | 0.0103 | 1 | 0.001 | 0.005 | Total | 0-38064 | 27-Jul-22 | 31-Jul-22 |
| Naphthalene | EPA 625.1 | μg/L | ND | 1 | 0.001 | 0.005 | Total | 0-38064 | 27-Jul-22 | 31-Jul-22 |
| Perylene | EPA 625.1 | μg/L | ND | 1 | 0.001 | 0.005 | Total | 0-38064 | 27-Jul-22 | 31-Jul-22 |
| Phenanthrene | EPA 625.1 | μg/L | 0.00753 | 1 | 0.001 | 0.005 | Total | 0-38064 | 27-Jul-22 | 31-Jul-22 |
| Pyrene | EPA 625.1 | μg/L | 0.121 | 1 | 0.001 | 0.005 | Total | 0-38064 | 27-Jul-22 | 31-Jul-22 |

2

_

А

_

8

4.0


11

13

14

14

Page 26 of 47 10/19/2022

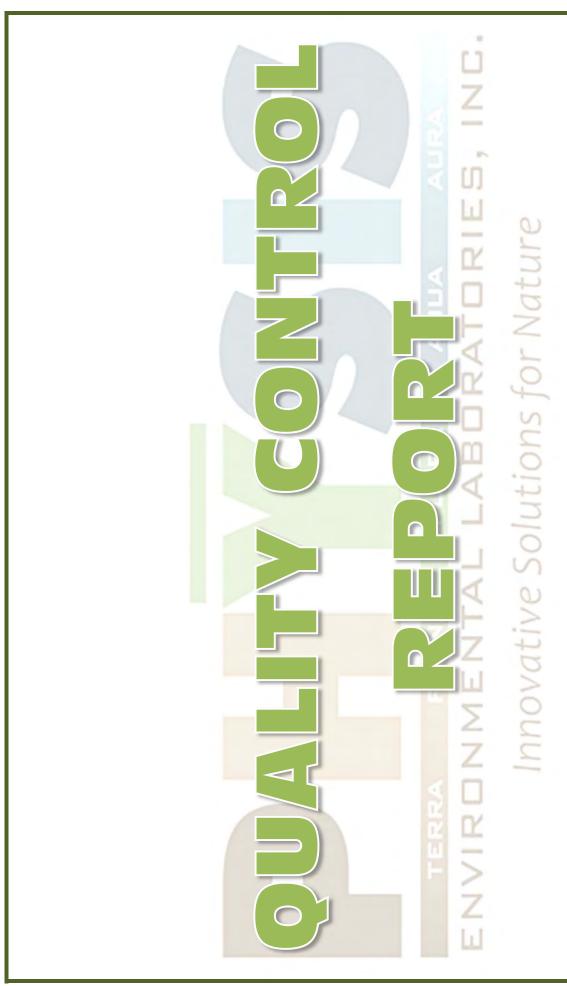



Project: RED HILL

Base/Neutral Extractable Compounds

QUALITY CONTROL REPORT

| | • | | | | | | | | | • | | | | | |
|-----------------------------|-------|------|---------------|----------|------|-----|----------|-------------|--------|-----------|-----------|------|----|-----------|-----------|
| ANALYTE | FRAC | TION | RESUL1 | DF | MDL | RL | UNITS | SPIKE | SOURCE | Ξ , | ACCURACY | | PF | ECISION | QA CODEc |
| | | | | | | | | LEVEL | RESUL | Г % | LIMITS | | % | LIMITS | |
| Sample ID: 9872 | 2-B1 | QA | ιQC Procedι | ıral Bla | nk | | Matrix | : BlankMatr | ix S | Sampled: | | | | Received: | |
| | | Me | thod: EPA 625 | .1 | | | Batch ID | : O-38064 | | Prepared: | 25-Jul-22 | | | Analyzed: | 31-Jul-22 |
| Disalicylidenepropanediamin | То | al | ND | 1 | 0.05 | 0.1 | μg/L | | | | | | | | |
| Sample ID: 9872 | 2-BS1 | QA | ιQC Procedι | ıral Bla | nk | | Matrix | : BlankMatr | ix S | ampled: | | | | Received: | |
| | | Me | thod: EPA 625 | .1 | | | Batch ID | : O-38064 | | Prepared: | 25-Jul-22 | | | Analyzed: | 31-Jul-22 |
| Disalicylidenepropanediamin | То | al | 9.48 | 1 | 0.05 | 0.1 | μg/L | 10 | 0 | 95 | 50 - 150% | PASS | | | |
| S L ID - 0 | | | 060 | l Dla | | · | Matrix | : BlankMatr | iv C | ampled: | | · | | Received: | |
| Sample ID: 9872 | 2-BS2 | QA | ιQC Procedι | ıraı Bia | 1K | | Mauix | Dialikiviau | 17 2 | ampieu. | | | | Mecerveu. | |
| Sample ID: 9872 | 2-BS2 | | thod: EPA 625 | | IIK. | | | : O-38064 | 1/ 3 | Prepared: | 25-Jul-22 | | | Analyzed: | 31-Jul-22 |

Page 28 of 47 10/19/2022



Project: RED HILL

Polynuclear Aromatic Hydrocarbons

QUALITY CONTROL REPORT

| ANALYTE | FRACTION | RESULT | DF | MDL | RL | UNITS | SPIKE | SOURCE | | ACCURACY | | PREC | ISION | QA CODEc |
|----------------------------|----------|-----------------|---------|-------|-------|---------------|--------|--------|---------|-----------|------|------|-------------|----------|
| | | | | | | | LEVEL | RESULT | % | LIMITS | | % | LIMITS | |
| Sample ID: 98722 | 2-B1 QA | QC Procedur | al Blar | nk | | Matrix: Bla | nkMatı | ix Sar | npled: | | | Re | ceived: | |
| | Me | thod: EPA 625.1 | | | | Batch ID: O-3 | | Pr | epared: | 25-Jul-22 | | , | Analyzed: 3 | 1-Jul-22 |
| (d10-Acenaphthene) | Total | 98 | 1 | | | % Recovery | 100 | | 98 | 65 - 113% | PASS | | | |
| (d10-Phenanthrene) | Total | 97 | 1 | | | % Recovery | 100 | | 97 | 80 - 111% | PASS | | | |
| (d12-Chrysene) | Total | 92 | 1 | | | % Recovery | 100 | | 92 | 60 - 139% | PASS | | | |
| (d12-Perylene) | Total | 87 | 1 | | | % Recovery | 100 | | 87 | 36 - 161% | PASS | | | |
| (d8-Naphthalene) | Total | 99 | 1 | | | % Recovery | 100 | | 99 | 44 - 119% | PASS | | | |
| 1-Methylnaphthalene | Total | ND | 1 | 0.001 | 0.005 | μg/L | | | | | | | | |
| 1-Methylphenanthrene | Total | ND | 1 | 0.001 | 0.005 | μg/L | | | | | | | | |
| 2,3,5-Trimethylnaphthalene | Total | ND | 1 | 0.001 | 0.005 | μg/L | | | | | | | | |
| 2,6-Dimethylnaphthalene | Total | ND | 1 | 0.001 | 0.005 | μg/L | | | | | | | | |
| 2-Methylnaphthalene | Total | ND | 1 | 0.001 | 0.005 | μg/L | | | | | | | | |
| Acenaphthene | Total | ND | 1 | 0.001 | 0.005 | μg/L | | | | | | | | |
| Acenaphthylene | Total | ND | 1 | 0.001 | 0.005 | μg/L | | | | | | | | |
| Anthracene | Total | ND | 1 | 0.001 | 0.005 | μg/L | | | | | | | | |
| Benz[a]anthracene | Total | ND | 1 | 0.001 | 0.005 | μg/L | | | | | | | | |
| Benzo[a]pyrene | Total | ND | 1 | 0.001 | 0.005 | μg/L | | | | | | | | |
| Benzo[b]fluoranthene | Total | ND | 1 | 0.001 | 0.005 | μg/L | | | | | | | | |
| Benzo[e]pyrene | Total | ND | 1 | 0.001 | 0.005 | μg/L | | | | | | | | |
| Benzo[g,h,i]perylene | Total | ND | 1 | 0.001 | 0.005 | μg/L | | | | | | | | |
| Benzo[k]fluoranthene | Total | ND | 1 | 0.001 | 0.005 | μg/L | | | | | | | | |
| Biphenyl | Total | ND | 1 | 0.001 | 0.005 | μg/L | | | | | | | | |
| Chrysene | Total | ND | 1 | 0.001 | 0.005 | μg/L | | | | | | | | |
| Dibenz[a,h]anthracene | Total | ND | 1 | 0.001 | 0.005 | μg/L | | | | | | | | |
| Dibenzo[a,l]pyrene | Total | ND | 1 | 0.001 | 0.005 | μg/L | | | | | | | | |

1904 E. Wright Circle, Anaheim CA 92806

main: (714) 602-5320

fax: (714) 602-5321

www.physislabs.com

info@physislabs.com

CA ELAP #2769

qcb - 2 of 7

Page 29 of 47 10/19/2022



Project: RED HILL

Innovative Solutions for Nature

| Poly | ynuclear | Aroma | atic | Hydr | ocar | bons | | C | QUA | LITY CON | NTROL | REPO | RT |
|------------------------|----------|--------|------|-------|-------|-------|-------|--------|------------|----------|-------|---------|----------|
| ANALYTE | FRACTION | RESULT | DF | MDL | RL | UNITS | SPIKE | SOURCE | | ACCURACY | PRI | ECISION | QA CODEc |
| | | | | | | | LEVEL | RESULT | % | LIMITS | % | LIMITS | |
| Dibenzothiophene | Total | ND | 1 | 0.001 | 0.005 | μg/L | | | | | | | |
| Fluoranthene | Total | ND | 1 | 0.001 | 0.005 | μg/L | | | | | | | |
| Fluorene | Total | ND | 1 | 0.001 | 0.005 | μg/L | | | | | | | |
| Indeno[1,2,3-cd]pyrene | Total | ND | 1 | 0.001 | 0.005 | μg/L | | | | | | | |
| Naphthalene | Total | ND | 1 | 0.001 | 0.005 | μg/L | | | | | | | |
| Perylene | Total | ND | 1 | 0.001 | 0.005 | μg/L | | | | | | | |
| Phenanthrene | Total | ND | 1 | 0.001 | 0.005 | μg/L | | | | | | | |
| Pyrene | Total | ND | 1 | 0.001 | 0.005 | μg/L | | | | | | | |

3

4

5

R

3

11

46

12



Project: RED HILL

Polynuclear Aromatic Hydrocarbons

QUALITY CONTROL REPORT

| ANALYTE | FRACTION | I RESULT | DF | MDL | RL | UNITS | SPIKE | SOURCE | Α | CCURACY | | PRECISION | QA CODEc |
|----------------------------|----------|------------------|---------|-------|-------|---------------|---------|--------|------------|-----------|------|-------------|----------|
| | | | | | | | LEVEL | RESULT | % | LIMITS | | % LIMITS | |
| Sample ID: 9872 | 2-BS1 Q/ | AQC Procedur | al Blan | ık | | Matrix: Bla | ankMatı | rix Sa | mpled: | | | Received: | |
| | Me | ethod: EPA 625.1 | | | | Batch ID: O-3 | 8064 | F | repared: 2 | 5-Jul-22 | | Analyzed: 3 | 1-Jul-22 |
| (d10-Acenaphthene) | Total | 101 | 1 | | | % Recovery | 100 | 0 | 101 | 65 - 113% | PASS | | |
| (d10-Phenanthrene) | Total | 98 | 1 | | | % Recovery | 100 | 0 | 98 | 80 - 111% | PASS | | |
| (d12-Chrysene) | Total | 101 | 1 | | | % Recovery | 100 | 0 | 101 | 60 - 139% | PASS | | |
| (d12-Perylene) | Total | 87 | 1 | | | % Recovery | 100 | 0 | 87 | 36 - 161% | PASS | | |
| (d8-Naphthalene) | Total | 98 | 1 | | | % Recovery | 100 | 0 | 98 | 44 - 119% | PASS | | |
| 1-Methylnaphthalene | Total | 0.478 | 1 | 0.001 | 0.005 | μg/L | 0.5 | 0 | 96 | 49 - 117% | PASS | | |
| 1-Methylphenanthrene | Total | 0.414 | 1 | 0.001 | 0.005 | μg/L | 0.5 | 0 | 83 | 66 - 127% | PASS | | |
| 2,3,5-Trimethylnaphthalene | Total | 0.453 | 1 | 0.001 | 0.005 | μg/L | 0.5 | 0 | 91 | 57 - 120% | PASS | | |
| 2,6-Dimethylnaphthalene | Total | 0.463 | 1 | 0.001 | 0.005 | μg/L | 0.5 | 0 | 93 | 54 - 117% | PASS | | |
| 2-Methylnaphthalene | Total | 0.484 | 1 | 0.001 | 0.005 | μg/L | 0.5 | 0 | 97 | 47 - 130% | PASS | | |
| Acenaphthene | Total | 0.471 | 1 | 0.001 | 0.005 | μg/L | 0.5 | 0 | 94 | 53 - 131% | PASS | | |
| Acenaphthylene | Total | 0.475 | 1 | 0.001 | 0.005 | μg/L | 0.5 | 0 | 95 | 43 - 140% | PASS | | |
| Anthracene | Total | 0.434 | 1 | 0.001 | 0.005 | μg/L | 0.5 | 0 | 87 | 58 - 135% | PASS | | |
| Benz[a]anthracene | Total | 0.401 | 1 | 0.001 | 0.005 | μg/L | 0.5 | 0 | 80 | 55 - 145% | PASS | | |
| Benzo[a]pyrene | Total | 0.415 | 1 | 0.001 | 0.005 | μg/L | 0.5 | 0 | 83 | 51 - 143% | PASS | | |
| Benzo[b]fluoranthene | Total | 0.496 | 1 | 0.001 | 0.005 | μg/L | 0.5 | 0 | 99 | 46 - 165% | PASS | | |
| Benzo[e]pyrene | Total | 0.454 | 1 | 0.001 | 0.005 | μg/L | 0.5 | 0 | 91 | 42 - 152% | PASS | | |
| Benzo[g,h,i]perylene | Total | 0.438 | 1 | 0.001 | 0.005 | μg/L | 0.5 | 0 | 88 | 63 - 133% | PASS | | |
| Benzo[k]fluoranthene | Total | 0.445 | 1 | 0.001 | 0.005 | μg/L | 0.5 | 0 | 89 | 56 - 145% | PASS | | |
| Biphenyl | Total | 0.485 | 1 | 0.001 | 0.005 | μg/L | 0.5 | 0 | 97 | 56 - 119% | PASS | | |
| Chrysene | Total | 0.432 | 1 | 0.001 | 0.005 | μg/L | 0.5 | 0 | 86 | 56 - 141% | PASS | | |
| Dibenz[a,h]anthracene | Total | 0.437 | 1 | 0.001 | 0.005 | μg/L | 0.5 | 0 | 87 | 55 - 150% | PASS | | |
| Dibenzo[a,l]pyrene | Total | 0.202 | 1 | 0.001 | 0.005 | μg/L | 0.25 | 0 | 81 | 50 - 150% | PASS | | |

1904 E. Wright Circle, Anaheim CA 92806

main: (714) 602-5320

fax: (714) 602-5321

www.physislabs.com

info@physislabs.com

CA ELAP #2769

qcb - 4 of 7

Page 31 of 47 10/19/2022

2

3

4

5

O

9

11

12



Project: RED HILL

Innovative Solutions for Nature

1904 E. Wright Circle, Anaheim CA 92806

| Poly | ynuclear . | Aroma | itic | Hydr | ocar | bons | | Q | UAI | LITY CONT | ROI | REPO | RT |
|------------------------|------------|--------|------|-------|-------|-------|-------|--------|-----|----------------|-----|---------|----------|
| ANALYTE | FRACTION | RESULT | DF | MDL | RL | UNITS | SPIKE | SOURCE | P | CCURACY | PR | ECISION | QA CODEc |
| | | | | | | | LEVEL | RESULT | % | LIMITS | % | LIMITS | |
| Dibenzothiophene | Total | 0.449 | 1 | 0.001 | 0.005 | μg/L | 0.5 | 0 | 90 | 75 - 113% PASS | | | |
| Fluoranthene | Total | 0.436 | 1 | 0.001 | 0.005 | μg/L | 0.5 | 0 | 87 | 60 - 146% PASS | | | |
| Fluorene | Total | 0.469 | 1 | 0.001 | 0.005 | μg/L | 0.5 | 0 | 94 | 58 - 131% PASS | | | |
| Indeno[1,2,3-cd]pyrene | Total | 0.435 | 1 | 0.001 | 0.005 | μg/L | 0.5 | 0 | 87 | 50 - 151% PASS | | | |
| Naphthalene | Total | 0.479 | 1 | 0.001 | 0.005 | μg/L | 0.5 | 0 | 96 | 41 - 126% PASS | | | |
| Perylene | Total | 0.397 | 1 | 0.001 | 0.005 | μg/L | 0.5 | 0 | 79 | 48 - 141% PASS | | | |
| Phenanthrene | Total | 0.458 | 1 | 0.001 | 0.005 | μg/L | 0.5 | 0 | 92 | 67 - 127% PASS | | | |
| Pyrene | Total | 0.411 | 1 | 0.001 | 0.005 | μg/L | 0.5 | 0 | 82 | 54 - 156% PASS | | | |

qcb - 5 of 7

Page 32 of 47 10/19/2022

CA ELAP #2769



Project: RED HILL

Polynuclear Aromatic Hydrocarbons

QUALITY CONTROL REPORT

| ANALYTE | FRACTIO | ON RESULT | DF | MDL | RL | UNITS | SPIKE | SOURCE | Α | CCURACY | | PRE | CISION | QA CODEc |
|----------------------------|---------|-------------------|---------|-------|-------|---------------|---------|--------|------------|-----------|------|-----|-----------|-----------|
| | | | | | | | LEVEL | RESULT | % | LIMITS | | % | LIMITS | |
| Sample ID: 9872 | 2-BS2 | QAQC Procedura | al Blar | nk | | Matrix: Bl | ankMatr | ix Sa | mpled: | | | R | eceived: | |
| | | Method: EPA 625.1 | | | | Batch ID: O-3 | 38064 | Р | repared: 2 | 5-Jul-22 | | | Analyzed: | 31-Jul-22 |
| (d10-Acenaphthene) | Total | 100 | 1 | | | % Recovery | 100 | 0 | 100 | 65 - 113% | PASS | 1 | 30 PAS | SS |
| (d10-Phenanthrene) | Total | 99 | 1 | | | % Recovery | 100 | 0 | 99 | 80 - 111% | PASS | 1 | 30 PAS | SS |
| (d12-Chrysene) | Total | 107 | 1 | | | % Recovery | 100 | 0 | 107 | 60 - 139% | PASS | 6 | 30 PAS | SS |
| (d12-Perylene) | Total | 85 | 1 | | | % Recovery | 100 | 0 | 85 | 36 - 161% | PASS | 2 | 30 PAS | SS |
| (d8-Naphthalene) | Total | 98 | 1 | | | % Recovery | 100 | 0 | 98 | 44 - 119% | PASS | 0 | 30 PAS | SS |
| 1-Methylnaphthalene | Total | 0.48 | 1 | 0.001 | 0.005 | μg/L | 0.5 | 0 | 96 | 49 - 117% | PASS | 0 | 30 PAS | SS |
| 1-Methylphenanthrene | Total | 0.431 | 1 | 0.001 | 0.005 | μg/L | 0.5 | 0 | 86 | 66 - 127% | PASS | 4 | 30 PAS | SS |
| 2,3,5-Trimethylnaphthalene | Total | 0.466 | 1 | 0.001 | 0.005 | μg/L | 0.5 | 0 | 93 | 57 - 120% | PASS | 2 | 30 PAS | SS |
| 2,6-Dimethylnaphthalene | Total | 0.47 | 1 | 0.001 | 0.005 | μg/L | 0.5 | 0 | 94 | 54 - 117% | PASS | 1 | 30 PAS | SS |
| 2-Methylnaphthalene | Total | 0.489 | 1 | 0.001 | 0.005 | μg/L | 0.5 | 0 | 98 | 47 - 130% | PASS | 1 | 30 PAS | SS |
| Acenaphthene | Total | 0.472 | 1 | 0.001 | 0.005 | μg/L | 0.5 | 0 | 94 | 53 - 131% | PASS | 0 | 30 PAS | SS |
| Acenaphthylene | Total | 0.478 | 1 | 0.001 | 0.005 | μg/L | 0.5 | 0 | 96 | 43 - 140% | PASS | 1 | 30 PAS | SS |
| Anthracene | Total | 0.447 | 1 | 0.001 | 0.005 | μg/L | 0.5 | 0 | 89 | 58 - 135% | PASS | 2 | 30 PAS | SS |
| Benz[a]anthracene | Total | 0.43 | 1 | 0.001 | 0.005 | μg/L | 0.5 | 0 | 86 | 55 - 145% | PASS | 7 | 30 PAS | SS |
| Benzo[a]pyrene | Total | 0.436 | 1 | 0.001 | 0.005 | μg/L | 0.5 | 0 | 87 | 51 - 143% | PASS | 5 | 30 PAS | SS |
| Benzo[b]fluoranthene | Total | 0.531 | 1 | 0.001 | 0.005 | μg/L | 0.5 | 0 | 106 | 46 - 165% | PASS | 7 | 30 PAS | SS |
| Benzo[e]pyrene | Total | 0.48 | 1 | 0.001 | 0.005 | μg/L | 0.5 | 0 | 96 | 42 - 152% | PASS | 5 | 30 PAS | SS |
| Benzo[g,h,i]perylene | Total | 0.444 | 1 | 0.001 | 0.005 | μg/L | 0.5 | 0 | 89 | 63 - 133% | PASS | 1 | 30 PAS | SS |
| Benzo[k]fluoranthene | Total | 0.473 | 1 | 0.001 | 0.005 | μg/L | 0.5 | 0 | 95 | 56 - 145% | PASS | 7 | 30 PAS | SS |
| Biphenyl | Total | 0.489 | 1 | 0.001 | 0.005 | μg/L | 0.5 | 0 | 98 | 56 - 119% | PASS | 1 | 30 PAS | SS |
| Chrysene | Total | 0.449 | 1 | 0.001 | 0.005 | μg/L | 0.5 | 0 | 90 | 56 - 141% | PASS | 5 | 30 PAS | SS |
| Dibenz[a,h]anthracene | Total | 0.438 | 1 | 0.001 | 0.005 | μg/L | 0.5 | 0 | 88 | 55 - 150% | PASS | 1 | 30 PAS | SS |
| Dibenzo[a,l]pyrene | Total | 0.213 | 1 | 0.001 | 0.005 | μg/L | 0.25 | 0 | 85 | 50 - 150% | PASS | 5 | 30 PAS | SS |

1904 E. Wright Circle, Anaheim CA 92806

main: (714) 602-5320

fax: (714) 602-5321

www.physislabs.com

info@physislabs.com

CA ELAP #2769

qcb - 6 of 7

10/19/2022

Page 33 of 47

5

6

Q

10

13



1904 E. Wright Circle, Anaheim CA 92806

PHYSIS Project ID: 1407003-257 Client: Eurofins Eaton Analytical

Project: RED HILL

Polynuclear Aromatic Hydrocarbons

main: (714) 602-5320

fax: (714) 602-5321

www.physislabs.com

QUALITY CONTROL REPORT

| ANALYTE | FRACTION | RESULT | DF | MDL | RL | UNITS | SPIKE | SOURCE | Δ | CCURACY | PRI | ECISION Q | A CODEc |
|------------------------|----------|--------|----------|-------|-------|-------|-------|--------|----|----------------|-----|-----------|---|
| 711012112 | | | <u> </u> | 52 | | 05 | LEVEL | RESULT | % | LIMITS | % | LIMITS | ,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,, |
| Dibenzothiophene | Total | 0.459 | 1 | 0.001 | 0.005 | μg/L | 0.5 | 0 | 92 | 75 - 113% PASS | 2 | 30 PASS | |
| Fluoranthene | Total | 0.441 | 1 | 0.001 | 0.005 | μg/L | 0.5 | 0 | 88 | 60 - 146% PASS | 1 | 30 PASS | |
| Fluorene | Total | 0.474 | 1 | 0.001 | 0.005 | μg/L | 0.5 | 0 | 95 | 58 - 131% PASS | 1 | 30 PASS | |
| Indeno[1,2,3-cd]pyrene | Total | 0.435 | 1 | 0.001 | 0.005 | μg/L | 0.5 | 0 | 87 | 50 - 151% PASS | 0 | 30 PASS | |
| Naphthalene | Total | 0.478 | 1 | 0.001 | 0.005 | μg/L | 0.5 | 0 | 96 | 41 - 126% PASS | 0 | 30 PASS | |
| Perylene | Total | 0.421 | 1 | 0.001 | 0.005 | μg/L | 0.5 | 0 | 84 | 48 - 141% PASS | 6 | 30 PASS | |
| Phenanthrene | Total | 0.468 | 1 | 0.001 | 0.005 | μg/L | 0.5 | 0 | 94 | 67 - 127% PASS | 2 | 30 PASS | |
| Pyrene | Total | 0.421 | 1 | 0.001 | 0.005 | μg/L | 0.5 | 0 | 84 | 54 - 156% PASS | 2 | 30 PASS | |

CA ELAP #2769

qcb - 7 of 7

Page 34 of 47 10/19/2022

info@physislabs.com

3

4

5

6

_

10

13

14



Page 35 of 47

10/19/2022

Sample ID: 98723

| | | Concentration | | | |
|---------|----------|---------------|---|------------|------------|
| RT | Area Pct | (ng/L) | Library/ID | Cas Number | Match Qual |
| 32.6416 | 0.2865 | 1111 | Anthracene-D10- | 1719-06-8 | 96 |
| 59.1141 | 23.0433 | 89377 | 1-Hexene, 3,5,5-trimethyl- | 4316-65-8 | 84 |
| 35.5919 | 0.4386 | 1701 | 1,2-Benzenedicarboxylic acid, bis(2-methylpropyl) ester | 84-69-5 | 98 |
| 25.1194 | 0.0872 | 338 | Diethyl Phthalate | 84-66-2 | 97 |
| 39.1191 | 0.0662 | 257 | 1,4-Dibutyl benzene-1,4-dicarboxylate | 1962-75-0 | 98 |
| 20.7578 | 0.0562 | 218 | 2,5-Cyclohexadiene-1,4-dione, 2,6-bis(1,1-dimethylethyl)- | 719-22-2 | 87 |
| 57.3745 | 0.0548 | 212 | Bis(2-ethylhexyl) phthalate | 117-81-7 | 81 |
| 44.6676 | 0.0441 | 171 | Pyrene | 129-00-0 | 97 |
| 60.3903 | 0.0360 | 140 | Heneicosane | 629-94-7 | 92 |
| 66.0568 | 0.0345 | 134 | Hentriacontane | 630-04-6 | 89 |
| 63.2690 | 0.0273 | 106 | Hentriacontane | 630-04-6 | 91 |
| 52.5711 | 0.0222 | 86 | Benzyl butyl phthalate | 85-68-7 | 88 |

Concentration estimated using the response for Anthracene-d10

-

Sample ID: Lab Blank Batch O-38064

| | | Concentration | | | |
|---------|----------|---------------|--|--------------|------------|
| RT | Area Pct | (ng/L) | Library/ID | Cas Number | Match Qual |
| 32.6440 | 5.5511 | 1111 | Anthracene-D10- | 1719-06-8 | 96 |
| 14.9715 | 1.2315 | 246 | Cyclohexane, 1,2,4,5-tetraethyl-, (1.alpha.,2.alpha.,4.alpha.,5.alpha.)- | 61142-24-3 | 82 |
| 14.9715 | 1.2098 | 242 | 3-Hexene, 3-ethyl-2,5-dimethyl- | 62338-08-3 | 82 |
| 43.1778 | 0.9236 | 185 | Terephthalic acid, isobutyl butyl ester | 1000323-56-2 | 95 |
| 60.3753 | 0.7547 | 151 | Heneicosane | 629-94-7 | 91 |
| 14.8120 | 0.6560 | 131 | Cyclohexane, 1,2,4,5-tetraethyl-, (1.alpha.,2.alpha.,4.alpha.,5.alpha.)- | 61142-24-3 | 83 |
| 25.1154 | 0.6335 | 127 | Diethyl Phthalate | 84-66-2 | 99 |
| 66.0814 | 0.5730 | 115 | Heneicosane | 629-94-7 | 94 |
| 15.6916 | 0.5092 | 102 | 3-Octene, 2,2-dimethyl- | 86869-76-3 | 84 |

Concentration estimated using the response for Anthracene-d10

-

3

4

5

b

G

9

10

11

13

14



11-5

CHAIN OF CUSTODY RECORD


| eurofins | 0 | CHAIN OF CUSTO | USTODY RECORD | 2022 |
|---|---|---|---|---|
| Eaton Analytical | alytical EUROFINS EATON ANALYTICAL USE ONLY: | AL USE ONLY: | | /19/2 |
| | LOGIN COMMENTS: | | SAMPLES CHECKED AGAINST COC BY: | |
| 750 Royal Oaks Drive, Suite 100 Monrovia, CA 91016-3629 | | | SAMPLES LOGGED IN BY: | GED IN BY: |
| Phone: 626 386 1100 | SAMPLE TEMP RECEIVED AT: Colton / No. California / Arizona | AT: rizona°C | SAMPLES REC'D DAY OF COLLECTION? (Compliance: 4 ± 2 °C) | LLECTION? (check for yes) |
| Fax: 626 386 1101 | Monrovia | ိုင် | (Compliance: 4 ± 2 °C) | |
| 800 566 LABS (800 566 5227) | CONDITION OF BLUE ICE: Frozen | Par | Partially Frozen Thawed Wet Ice | No Ice |
| | METHOD OF SHIPME! | NT: Pick-Up / Walk-In / | METHOD OF SHIPMENT: Pick-Up / Walk-In / FedEx / UPS / DHL / Area Fast / Top Line / Other: | ther: |
| TO BE COMPLETED BY SAMPLER: | | | (check for yes) | (check for yes) |
| COMPANY/AGENCY NAME: | PROJECT CODE: | 0 | | NON-COMPLIANCE SAMPLES |
| Honolulu Board of Water Supply | ply RED HILL | | - Requires state forms REGULATION INVOLVED: Type of samples (circle one): ROUTINE SPECIAL CONFIRMATION (eg. SDWA, Phase V, NPDES, FDA, | NVOLVED: TION (eg. SDWA, Phase V, NPDES, FDA,) |
| EEA CLIENT CODE: COC ID: | SAMPLE GROUP: | SEE. | SEE ATTACHED BOTTLE ORDER FOR ANALYSES | SES (check for yes), OR |
| HONOLULU | MW - INTERA Albuquerque + | | ist ANALYSES REQUIRED (enter number of bottles sent for each test for each sample | t for each test for each sample |
| TAT requested: rush by adv notice only: RUSH | STD 1 wk 3 dayX_ | 2 day 1 day | Ship to: PHYSIS Laboratories | |
| SAMPLE TIME SAMPLE TIME | CLIENT LAB ID | FIELD DATA FIELD DATA 625 PAH Physis LL (EAL) + | 1904 E. Wright Circle Anaheim, CA 92806 714-602-5320 Attn: Misty Mercier misty@physislabs.com Bill and Report to EEA-Monvovia | COMMENTS Page 39 of 47 |
| 1/21/29:304 | BWS2253-J1-AQ RC | RGW 6 | | kit# 2 3 4ºo |
| | | | | Provided by EEA |
| | | | | |
| | [Bottle Size] | | | |
| * MATRIX TYPES: RSW = Raw Surface Water RGW = Raw Ground Water | face Water | | SEAW = Sea Water BW = Bottled Water SO = Soil WW = Waste Water SW = Storm Water SL = Sludge | O = Other - Please Identify |
| SIGNATURE | | PRINT NAME | COMPANY/TITLE | DATE TIME |
| SAMPLED BY: R | Kevin For | Kevin Fong/Justin Barnes/Scott Lai | The Limtiaco Consulting Group | 1/26/22 9:304 |
| BEHNOUISINED BY: | Kevin For | Kevin Fong/Justin Barnes/Scott Lai | The Limtiaco Consulting Group | 1/06/22 11:450 |
| RECEVEN NAME OF THE RELINOUISHED BY: | Adam | MOTEV | Plusis | SUBO EEHER |
| RECEIVED BY: | | | | |

PAGE 1 OF 1

Shipping Order Form - Bottle Order



America Environment Testing



Phone (626) 386-1100 Monrovia, CA 91016 750 Royal Oaks Drive Suite 100 Monrovia, CA (Suite 100)

Shipping Order ID: 8489

Ship Via: FedEx

Due On: 7/7/2022 11:59:00PM

Ship To Information

Project Manager: Debbie Frank

Em: Debbie.Frank@et.eurofinsus.com

Company Name: THE LIMTIACO CONSULTING GROUP, INC

Attention: Scott Lai

Address 1: 1622 KANAKANUI STREET

Address 3: Address 2:

96817 Honolulu

State: CITY:

Zip:

+1-808-596-7790

Project Ref: Phone #: INTERA - Red-Hill-Incident

Notes to Bottle/Shipping Department

WET ICE KIT

separate coolers 6 bottles each Organize Containers by Sample ID and package by Sample ID in 4

samples that are in the cooler (Print extra set of labels to use for Label the cooler under the left hand handle with the ID of the

Send only medium to large coolers

sample ID, either Baggied or dividers, as needed Pack small orders by sample ID in a single cooler separated by

Shipping Method: Pack by sample set (affixed TALS labels)

Ready to Fill

☑ Preprinted COC

☐ Seals on Bottle 1 Number of COC Copies

☐ Seals on Coolers

☐ Return Shipment Labels □ Prepaid Return

Monrovia, CA (Suite 100)

☑ Temperature Control ☐ Short Hold Times

J x

Drinkad as

7/7/0000 4.04.04DAA

)

)

j

) .))

Bottle Order Information

Bottle Order #: Bottle Order: INTERA - (625PAH Supplementals) 2340

Order Status: Date Order Posted:

Deliver By Date:

Prepared By: Request From Client: 7/7/2022 7/7/2022 12:38:25PM 7/7/2022 11:59:00PM Davis Haley Ready To Process

PWSID: Lab Project Number: 38000861

Sets

Bottles/Set 0

Qy

24

Amber Glass 1 liter - unpreserved **Bottle Type Description**

Preservative None

SUBCONTRACT - 625 PAH Physis

Water Matrix

Sample Type Normal

Comments

Lot#

Method

LL (EAL) + TICs

Bottle Type Description Total Bottle Summary

Amber Glass 1 liter - unpreserved

None Preservative

Total Bottles:

24 24 **Bottle Count**

Comment

Notes to Field Staff:

Preservative

Health and Safety Notes:



sampler instructions Scan QR code for field

| Relinquished By | Company | Date | Time | Received By | Compan |
|-----------------|---------|------|------|-------------|--------|
| | Company | Date | Time | Received By | |

Filled by:

Creator:

Davis Haley

Order Completion Information

Sent Via: Sent Date.

Tracking #:

NA

| Receiving Info | | |
|--|----------------------------------|---|
| Initials Received By: | | |
| 2. Date Received: 7/27/22 | | • |
| 3. Time Received: 0915 | | |
| 4. Client Name: ELMOFIN 5 | | |
| 5. Courier Information: (Please circle) | | |
| • Client • UPS | Area Fast DRS | |
| FedEx GSO/GLS | Ontrac PAMS | |
| PHYSIS Driver: | | |
| i. Start Time: | iii. Total Mileage: | |
| ii. End Time: | iv. Number of Pickups: | |
| 6. Container Information: (Please put the # of cont | tainers or circle none) | |
| Cooler Styrofoam Cooler | Boxes None | |
| Carboy(s) Carboy Trash Can(s) | | |
| 7. What type of ice was used: (Please circle any the | at apply) | |
| Wet Ice Blue Ice | | |
| 8. Randomly Selected Samples Temperature (°C): | 3.) Used I/R Thermometer # $1-2$ | |
| Inspection Info 1. Initials Inspected By: | | |
| Sample Integrity Upon Receipt: | | |

Notes:

COC(s) included and completely filled out......

2. All sample containers arrived intact.....

3. All samples listed on COC(s) are present.....

4. Information on containers consistent with information on COC(s).....

5. Correct containers and volume for all analyses indicated......

6. All samples received within method holding time.....

 Correct preservation used for all analyses indicated...... Name of sampler included on COC(s).....

Innovative Solutions for Nature

Sample Receipt Summary

No

No

No

No

No

No

CHAIN OF CUSTODY RECORD

| Eaton Analytical | CHAIN EUROFINS EATON ANALYTICAL USE ONLY: LOGIN COMMENTS: | CHAIN OF CUSTO | OF CL | DY | RECORD SAMPLES CHECKED AGAINST COC BY: |
|---|--|------------------------------------|---------------------------|--|--|
| 750 Royal Oaks Drive, Suite 100 Monrovia, CA 91016-3629 | | | | | SAMPLES LOGGED IN BY: |
| Phone: 626 386 1100 Fax: 626 386 1101 | SAMPLE TEMP RECEIVED AT: Colton / No. California / Arizona | Arizona | | SAMPLI (Compliance: 4 ± 2 °C) | SAMPLES REC'D DAY OF COLLECTION? |
| 800 566 LABS (800 566 5227) | CONDITION OF BLUE ICE: Frozen | ICE: Frozen | °C (C | °C (Compliance: 4 ± 2 °C) Partially Frozen Thawed | Wet Ice |
| | METHOD OF SHIPMI | ENT: Pick-Up / | Walk-In / Fe | S / DHL | Fast / Top Lin |
| TO BE COMPLETED BY SAMPLER: | | | | (check for yes) | |
| COMPANY/AGENCY NAME: | PROJECT CODE: | | CON | SAMPL | |
| Honolulu Board of Water Supply | RED HILL | F | Type of s | - Requires state forms REGULATION INVOLVED: Type of samples (circle one): ROUTINE SPECIAL CONFIRMATION (eg. SDWA, Phase V, NPDES, FDA, | REGULATION INVOLVED: E SPECIAL CONFIRMATION (eg. SDV |
| EEA CLIENT CODE: COC ID: | SAMPLE GROUP: | | SEE AT | ATTACHED BOTTLE ORL | BOTTLE ORDER FOR ANALYSES |
| HONOLULU | MW - INTERA Albuquerque + | buquerque + | list ANAL | ist ANALYSES REQUIRED (enter number of bottles sent for each test for each sample | imber of bottles |
| TAT requested: rush by adv notice only: RUSH | STD 1 wk 3 dayX_ | 2 day 1 day | TIC | Ship to: PH | Ship to: PHYSIS Laboratories |
| SAMPLE DATE SAMPLE TIME SAMPLE ID | CLIENT LAB ID | FIELD DATA | 625 PAH Physis LL (EAL) + | 1904 E. Wright Circle Anaheim, CA 92806 714-602-5320 Attn: Misty Mercier misty@physislabs.com Bill and Report t | 1904 E. Wright Circle Anaheim, CA 92806 714-602-5320 Attn: Misty Mercier misty@physislabs.com Bill and Report to EEA-Monvovia |
| 108.10 a/12/ | BWS2253-J1-AQ F | RGW | 6 | | |
| 4 | | | | | |
| | | | | | |
| * MATRIX TYPES: RSW = Raw Surface Water RGW = Raw Ground Water | CFW = Chlor(am)inated Finished Water FW = Other Finished Water | d Finished Wate | L | SEAW = Sea Water BW = Bottled Water WW = Waste Water SW = Storm Water | Water SO = Soil Vater SL = Sludge |
| SIGNATURE | | PRINT NAME | | COMPANY/TITLE | TLE |
| SAMPLED BY: R. | Kevin-F | Kevin Feng/Justin Barnes/Scott Lai | es/Scott Lai | The Limtiaco Consulting Group | iroup |
| REHNQUISHED BY: | Kevin F | Kevin Fong/Justin Barnes/Scott Lai | es/Scott Lai | The Limtiaco Consulting Group | roup |
| RECEIVED BY ACTION | Adam | MAT M | | Physis | |
| RECEIVED BY: | | | | | |

PAGE 1 OF 1

Shipping Order Form - Bottle Order

eurofins

Phone (626) 386-1100 Monrovia, CA 91016 750 Royal Oaks Drive Suite 100 Monrovia, CA (Suite 100)

Due On: 7/7/2022 11:59:00PM

Ship Via: FedEx

Shipping Order ID: 8489 America Environment Testing

Address 1: Attention: Company Name: THE LIMTIACO CONSULTING GROUP, INC Em: Debbie.Frank@et.eurofinsus.com Project Manager: Debbie Frank Ship To Information 1622 KANAKANUI STREET Scott Lai

State: Zip: Project Ref: Phone #: 96817 INTERA - Red-Hill-Incident +1-808-596-7790

CITY: Address 3:

Honolulu

Address 2:

Notes to Bottle/Shipping Department

WET ICE KIT

samples that are in the cooler (Print extra set of labels to use for Label the cooler under the left hand handle with the ID of the separate coolers 6 bottles each Organize Containers by Sample ID and package by Sample ID in 4

sample ID, either Baggied or dividers, as needed Pack small orders by sample ID in a single cooler separated by Send only medium to large coolers

| ipping Method: Pack by sample set (affixed TALS labels) | t (affixed TALS labels) |
|---|--------------------------|
| Ready to Fill | ☐ Return Shipment Labels |
| Preprinted COC | ☐ Prepaid Return |
| 1 Number of COC Copies | Monrovia, CA (Suite 100) |
| Seals on Bottle | ☐ Short Hold Times |
| Seals on Coolers | ☑ Temperature Control |
| Priority | □Rush |

Please notify your PM immediately if an error is found in shipment. When returning samples, please return all provided QC samples.

J x

)

)

j

)

Bottle Order Information

Bottle Order #: Date Order Posted: Request From Client: 7/7/2022 Bottle Order: 7/7/2022 12:38:25PM INTERA - (625PAH Supplementals) 2340

Prepared By: Deliver By Date:

Order Status: 7/7/2022 11:59:00PM Davis Haley Ready To Process

PWSID: Lab Project Number: 38000861

Sets

Bottles/Set 6

Qy

24

Amber Glass 1 liter - unpreserved **Bottle Type Description**

Preservative None

SUBCONTRACT - 625 PAH Physis

Water Matrix

Sample Type Normal

Comments

Lot#

Method

LL (EAL) + TICs

| Bottle | Tota |
|-------------|--------------|
| | Total Bottle |
| Type D | ttle S |
|)esci | imi |
| Description | Summary |
| | |

Amber Glass 1 liter - unpreserved

None Preservative

Total Bottles:

24 24 **Bottle Count**

Comment

Preservative

Health and Safety Notes:

Notes to Field Staff:

sampler instructions Scan QR code for field

| סד | Relinquished By | Relinquished By |
|---|--------------------|-----------------|
| Please notify your PM immediately if an error is found in shipment. When returning samples, please return all provided QC sampl | Company | Company |
| l immediately if an | Date | Date |
| error i | ate | ate |
| e found in | Time | Time |
| | Received By | Received By |
| | Company | Company |
| | Seal #: Seal #: | Seal # |
| dunes. | | |

Filled by:

Creator:

Davis Haley

Sent Via: Sent Date.

Tracking #:

Order Completion Information



Sample Receipt Summary

| 1. Initials Received By: 2. Date Received: | 11- | | | |
|--|---|----------------|---------------------------|--------------------------|
| | imofin5 | | | |
| 5. Courier Information | | | | |
| • Client | • UPS | | Area Fast | • DRS |
| • FedEx | GSO/GLS | | Ontrac | PAMS |
| PHYSIS Driver: | | | | |
| i. Start Tir | ne: | | iii. Total M | ileage: |
| | e: | | | of Pickups: |
| 6. Container Informati | on: (Please put the # of conta | iners or circl | e none) | |
| • Cooler | Styrofoam Cooler | | Boxes | None |
| Carboy(s) | Carboy Trash Can(s) | | Carboy Cap(s) | Other |
| 7. What type of ice wa | s used: (Please circle any that | apply) | | |
| • Wet Ice | | ry Ice | Water | None |
| 8. Randomly Selected | Samples Temperature (°C): | | Used I/R Thermo | meter# /-2 |
| Initials Inspected By mple Integrity Upon Rece | | | | |
| COC(s) included and | completely filled out | | (Va) | / No |
| The state of the s | rs arrived intact | | 7 | / No |
| | COC(s) are present | | 7.3 | / No |
| | ainers consistent with inform | | | / No |
| | and volume for all analyses in | | | / No |
| | within method holding time | | | / No |
| 7. Correct preservation | used for all analyses indicate | ed | @ | / No |
| 8. Name of sampler in | cluded on COC(s) | | (Yes) | 1 De post |
| | | Notes: | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |

Project Iteration ID: 1407003-257

COC Page Number: 4 of 4

Bottle Label Color: NA

Client Name:

Project Name:

Eurofins Eaton Analytical

RED HILL

P:\Sample Logistics (SL)\SRS

Page 1 of 1

Login Sample Receipt Checklist

Client: City & County of Honolulu Job Number: 380-12276-1

Login Number: 12276 List Source: Eurofins Eaton Monrovia

List Number: 1

Creator: Ngo, Theodore

| Question | Answer | Comment |
|--|--------|---------|
| The cooler's custody seal, if present, is intact. | True | |
| Sample custody seals, if present, are intact. | True | |
| Samples were received on ice. | True | |
| Cooler Temperature is acceptable. | True | |
| Cooler Temperature is recorded. | True | |
| COC is present. | True | |
| COC is filled out in ink and legible. | True | |
| COC is filled out with all pertinent information. | True | |
| There are no discrepancies between the containers received and the COC. | True | |
| Samples are received within Holding Time (excluding tests with immediate HTs) | True | |
| Sample containers have legible labels. | True | |
| Containers are not broken or leaking. | True | |
| Sample collection date/times are provided. | True | |
| There is sufficient vol. for all requested analyses, incl. any requested MS/MSDs | True | |
| Containers requiring zero headspace have no headspace or bubble is <6mm (1/4"). | True | |
| Samples do not require splitting or compositing. | True | |
| Container provided by EEA | True | |

3

4

5

<u>۾</u>

10

10

13